

# ADVENTURE POWER®

This battery is specially designed as a high-performance battery used for motorcycles. The characteristics are high cranking AMPS, high vibration resistant and long cycle life.

UB16HL-A-LM


**Conventional Battery** 

### Specification

Nominal Voltage	12 Volts
Nominal Capacity (10H-R)	19 Ah
Approximate Weight (With Acid)	11.90lbs. (5.4 kgs)
Recommended Maximum Charging Current Limit	5.7A
<b>Equalization and Cycle Service</b>	14.8 VDC/unit Average at 25°C
<b>Cycle Life</b> (JIS D 5302:2004)	325
Terminal Type	F



# Physical Dimensions: in (mm)

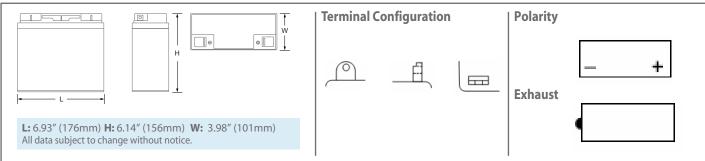



**Front** 



Side



**Terminals** 

# **Filling Instructions**

- <sup>o</sup> Before filling, ensure your new battery is the correct size for your vehicle.
- Once the battery is filled, it cannot be returned to vendor.
- Only use the acid pack that comes with your battery.
- Fill all cells to the "FULL" mark and wait 30 minutes.
- After 30 minutes, any cell that has settled below the "FULL" mark should be topped off to the "FULL" mark.
- Replace the sealer caps before charging the battery.

### **Charging Instructions**

- Charge the battery fully before installing.
- Never charge this battery with a charger that delivers more than 6 amps of current. Larger chargers will harm the battery.
- For optimum performance, UPG recommends charging and maintaining with the Energizer® Maintainer 4000 battery charger.
- This charger/ maintainer can remain connected to the battery indefinitely.

www.upgi.com